



FITMENT INSTRUCTIONS

CANOPY CUPBOARD

Installation Instructions

Preliminary information

Installation and fitment instructions includes the tools required, fasteners included in the kit, and the hardware included in the kit.

Please follow the instructions and check installation steps with the images in this document.

Alu-Cab recommends that all sealing work is allowed to cure for 24 hours, after which you may drive the vehicle on normal paved roads. Before driving off-road with your Alu-Cab product or operating your roof conversion, an additional cure period of 48 hours is required.

Failure to follow these instructions will void your warranty. Please ensure that you follow the sealant manufacturers curing time as per their technical data sheet.

These times may differ slightly from the times we have recommended.





Service Enquiries email
queries@alu-cab.com

Installation Instructions

Item No.	Part Number	Description	Qty
1	Canopy Cupboard		1
2	SCB560-000-004 Rev C	Mounting Bracket	1
3	SCB560-000-005	Bottom Mounting Bracket	3
4	M8 Flat Washer	M8 Flat Washer	11
5	N8 Nyloc Nut	N8 Nyloc Nut	11
6	M8x20 Cup Square Bolt	M8x20 Cup Square Bolt	3


Item No.	Part Number	Description	Qty
7	M8x20 Hex Head Bolt	M8x20 Hex Head Bolt	6
8	M6 Flat Washer	M6 Flat Washer	6
9	M6x20 Button Head Screw	M6x20 Button Head Screw	3
10	M6 Nyloc Nut	M6 Nyloc Nut	3
11	M8x35 Hex Head Bolt	M8x35 Hex Bolt	2
12	M8 Nut Cap	Plastic Nut Cap	11
13	M6 Nut Cap	Plastic Nut Cap	3

Installation Instructions

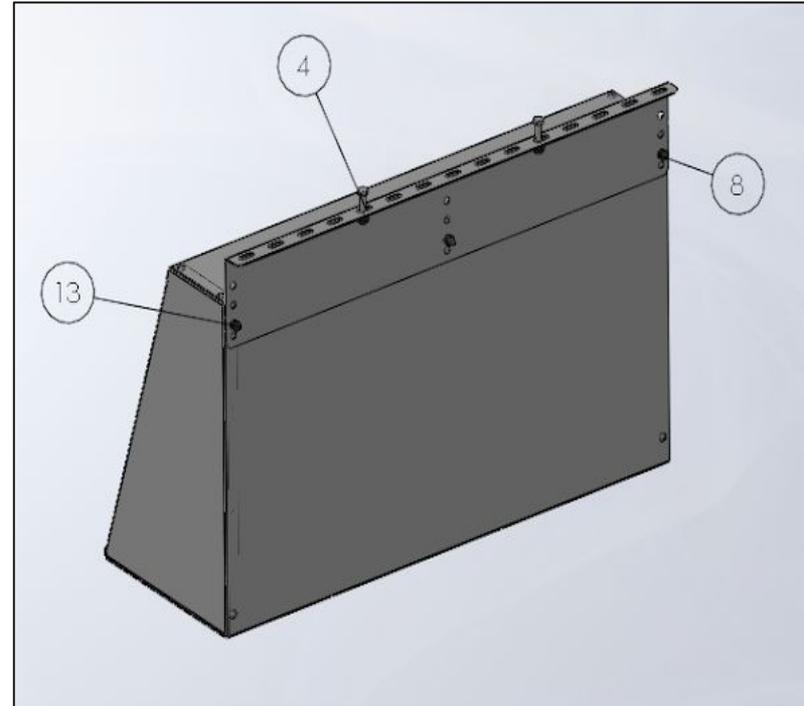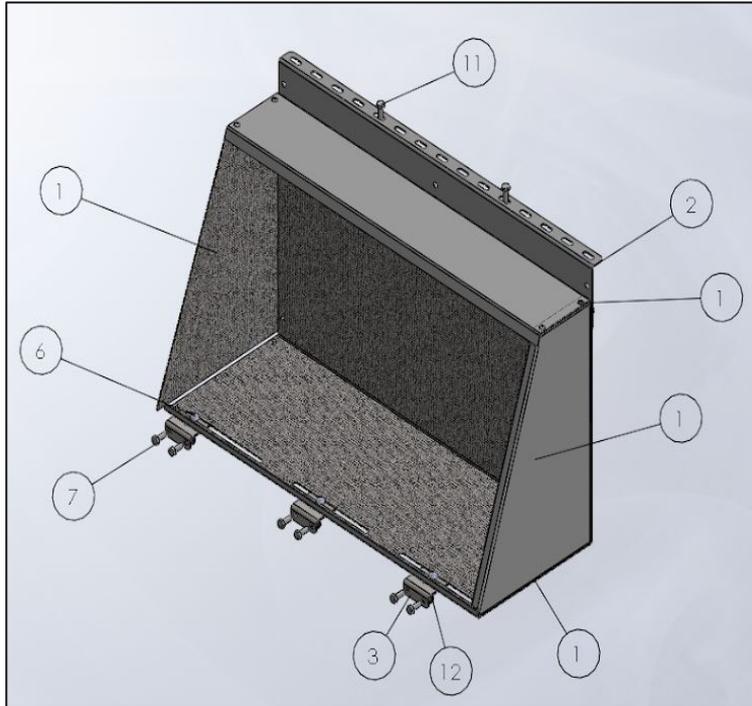

Installation Instructions

Assembled Canopy Cupboard

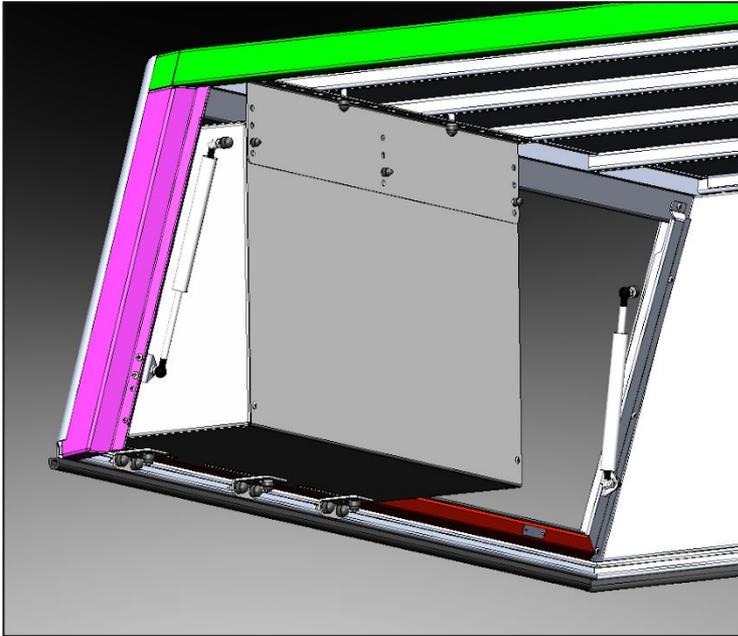

Fit the 3 off bottom brackets to the canopy nut slot frame using the supplied M8x20 bolts, nylock nuts and washer fasteners. Slide the M8x20 bolts into the nut slot frame of the canopy (2 per mounting bracket).



Installation Instructions



Leave the nuts only finger tight as it may be necessary to shift them later.

Install the three supplied bottom mount brackets so that they are equally spaced along the length of the canopy cupboard.

The next step is to slide the canopy cupboard in through the rear door opening on the canopy and rest it on top of the bottom brackets. Have someone hold the cupboard in place and ensure that it is spaced so that the gap between the front rebate and rear rebate is the same


Installation Instructions

With the cupboard in the correct position note which nut slots in the roof align with the top mount bracket of the cupboard. Slide 2 off M8x35 hex head bolts into the nut slots off the roof. Fit the top mount bracket.



Choose Correct
Nut Slots

With the Top Bracket fitted use three M6x20 Button Head bolts to fasten the Top Bracket to the Cupboard. The Bracket is height adjustable to suit multiple canopies. Remember to fit plastic nut caps over the nylock nuts

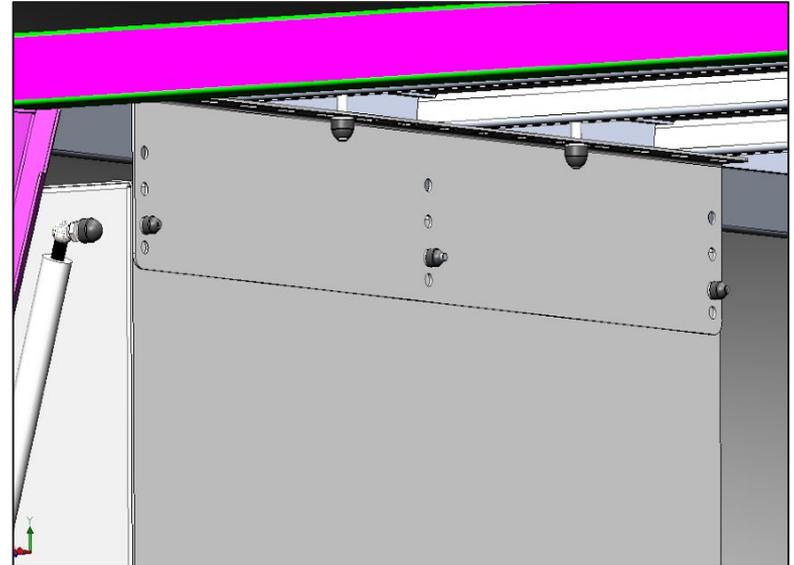

Installation Instructions

Photo of Assembled top bracket



With the Top Bracket fitted you can adjust the bottom brackets. Ensure that they line up with slot cut outs on the canopy cupboard, and do not clash with the canopy mounting brackets.

With the bottom brackets in the correct position fully tighten the nylock nuts that were left finger tight. Slide the supplied M8 Cup square bolts into the canopy Cupboard, tying the bottom mount brackets to the canopy cupboards. Fasten the cupboard to the mount brackets using the supplied M8 nylock nuts, washers.

Add nut caps to any exposed bolt heads or nuts and your installation is completed!

Disclaimer

All rights reserved. No part of this website may be reproduced, translated, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

Review all instructions information carefully before installation.

Any damages, direct or incidental to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer. Due to the various applications and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip.

If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.

WARNING

Always wear appropriate PPE (Personal protection equipment) when fitting our products. Although the mounting kit is designed to be DIY, if you have any doubts or concerns, contact an accredited fitment centre to carry out the work. Alu-Cab will not be liable for any injury to persons, and/or damage to products and/or vehicles.

While Alu-Cab Holdings takes reasonable measures to ensure that the contents of this Website are accurate and complete, Alu-Cab Holdings makes no representations or warranties, whether express or implied, as to the quality, timeliness, operation, integrity, availability or functionality of this Website or as to the accuracy, completeness or reliability of any information on this Website. Alu-Cab Holdings reserves the right to make changes, corrections and/or improvements to the information and to the products and programs described in such information, at any time without notice.

Alu-Cab Holdings will use reasonable endeavours to maintain the availability of the Website, except during scheduled maintenance periods, and reserves the right to discontinue providing the Website or the service or any part thereof with or without notice to you. Any person who accesses this Website or relies on this Website or on the information contained in this Website does so at his or her own risk.

Occasionally, at our discretion, we may include or offer third-party products or services on our website. These third-party sites have separate and independent privacy policies. We therefore have no responsibility or liability for the content and activities of these linked sites. Nonetheless, we seek to protect the integrity of our site and welcome any feedback about these sites.