



OLD MAN EMU

FITTING INSTRUCTIONS

OMESB104

VW Amarok

Spring Bush Kit

CONTENTS

Item	Part number	Qty
1	VW-007	1
2	VW-008	1

TOOLS REQUIRED

Bearing Puller & bearing Separator
Metric spanner set



Notes:

FK33 workshop tool kit is recommended to aid bush installation.

Refer to fitting instructions 3788079 for leaf spring removal and installation.


INSTALLATION PROCEDURE

Thoroughly grease the new spring and bush before installation.




Fit the bush to the new spring using the 200mm bolt, nut & bush guide as shown.

Tighten the bolt until you feel the bush bottom out on the guide. Then remove the bolt and guide.

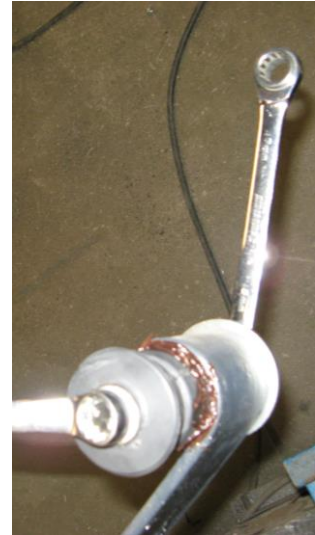

Fit the bearing separator and puller to push the bush in further so it is centrally located in the spring.

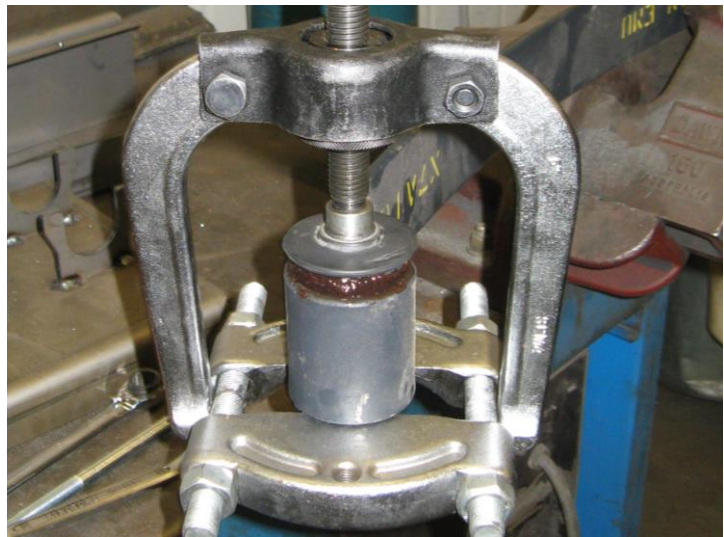

Repeat the above process for the front eye bush.

Note:

On the front bush the metal flange is designed to face the outside of the vehicle. This means left and right springs have the front bush fitted in opposite directions.

